


Backbands

Backbands are most commonly used in combination with casings, and are used to elevate and enhance the look of the casing while adding a dramatic impact.

ALL SIZES NOMINAL




M&M#	Nosing
1030	1-1/16" x 1-1/4" - RL Poplar

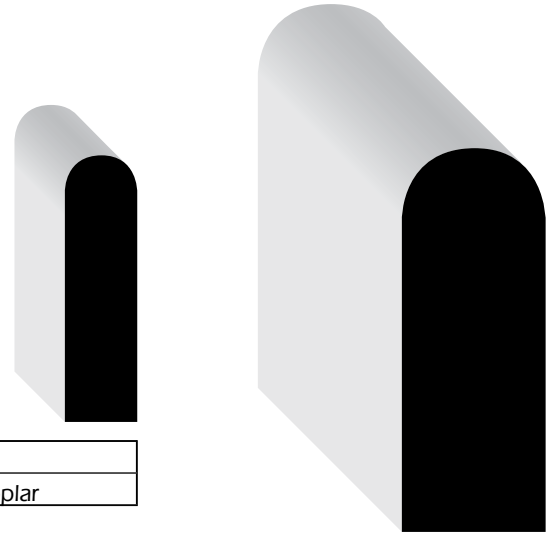


M&M#	Pediment Mould
953LPOP	3/8" x 1-3/8" Poplar


M&M#	Pediment Mould
200YVCPPOP	3/4" x 2" Poplar

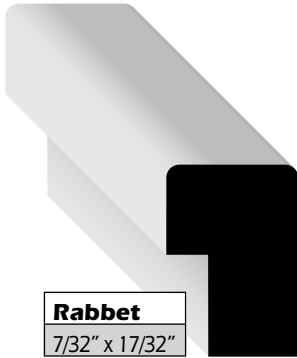

Rabbet
7/32" x 17/32"

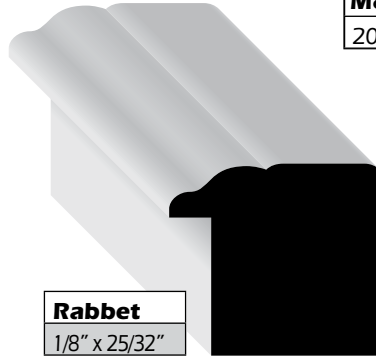

Rabbet
1/8" x 25/32"

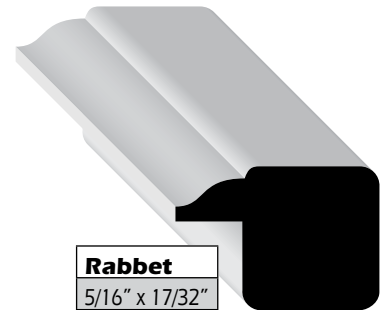


Rabbet
5/16" x 17/32"


M&M#	R.E. Backband
280	11/16" x 1" - RL Solid Pine

M&M#	Backband
818F08M	1" x 1-1/8" - 8' Ultralite

M&M#	Backband
1016O	3/4" x 1-1/16" - 7/6" & RL Oak
1016POP	3/4" x 1-1/16" - 7/6" & RL Poplar

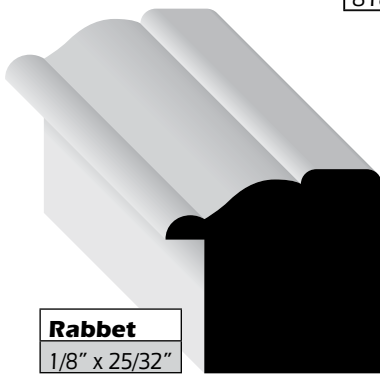


Rabbet
1/8" x 25/32"

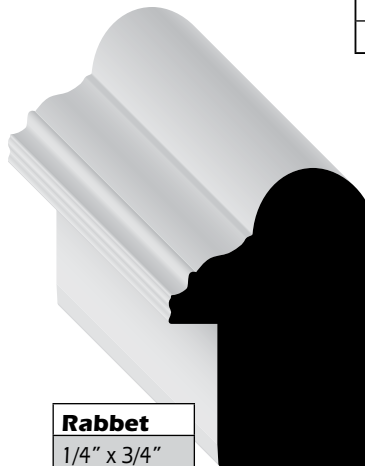

Rabbet
1/4" x 3/4"

M&M#	Backband
3436-BBO	1-1/16" x 1-1/8" - RL Oak
3436-BBPOP	1-1/16" x 1-1/8" - 7/6" Poplar
3436-BBMAP	1-1/16" x 1-1/8" - RL Maple

M&M#	Backband
282M	1-1/16" x 1-9/16" - RL Ultralite

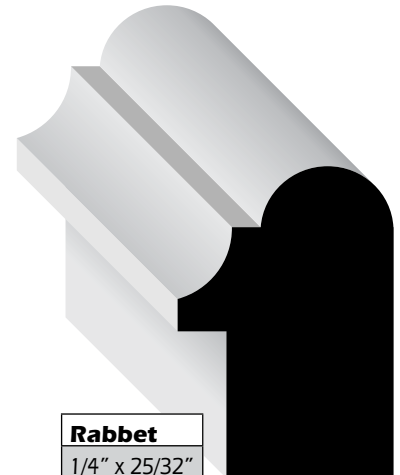

Rabbet
1/4" x 25/32"

M&M#	Backband
3652-BBO	1-1/8" x 1-5/8" - RL Oak
3652-BBPOP	1-1/8" x 1-5/8" - RL Poplar
3652-BBMAP	1-1/8" x 1-5/8" - RL Maple