

## Door Stops

The Door Stop mouldings are attached to the door jamb on both sides and at the top. It is where the door comes to a rest when it is closed stopping the door from moving any further, and covering the gap that would otherwise appear between the door and the jambs.

**ALL SIZES NOMINAL**




M&M#	Ranch Door Stop	
846	7/16" x 1-3/8" - 7' & RL	Solid Pine
847PRI	7/16" x 1-1/4" - 14'	FJ Poplar Primed
855	7/16" x 1-5/8" - RL	Solid Pine



M&M#	R1E Door Stop	
873L	7/16" x 2-1/8" - RL	Solid Pine
876	7/16" x 1-3/8" - RL	Solid Pine
885	7/16" x 1-5/8" - RL	Solid Pine



M&M#	R.E. Double Bullnose Stop	
887LPF07	3/8" x 1-1/4" - 7'	FJ Pine Primed
887LOF07	3/8" x 1-1/4" - 7'	Oak
887	3/8" x 1-1/4" - RL & 7'	Pine
887CEF07	3/8" x 1-1/4" - 7'	P/E Chesapeake
887LOTF07	3/8" x 1-1/4" - 7'	Oak Teak
877LMF07	1/2" x 1-1/4" - 7'	Ultralite
877LALP	1/2" x 1-1/4" - RL	Knotty Alder

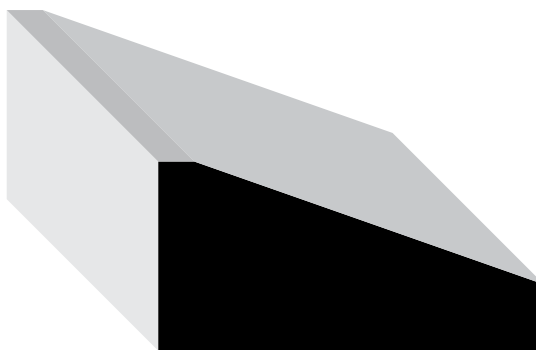

M&M#	Bi-Fold Stop	
313F07	1-11/32" x 21/32" - RL	Solid Pine




M&M#	Colonial Door Stop	
947	3/8" x 1-1/4" - 7' & RL	Solid Pine
947P	3/8" x 1-1/4" - 7' & 17'	FJ Pine Primed
947JF07	3/8" x 1-1/4" - 7'	Jesso
947CE	3/8" x 1-1/4" - 7' & 14'	P/E Chesapeake
947MAP	3/8" x 1-1/4" - 7' & RL	Maple
947O	3/8" x 1-1/4" - 7' & RL	Oak
947POP	3/8" x 1-1/4" - 7' & RL	Poplar
947OT	3/8" x 1-1/4" - 7' & RL	Oak Teak

M&M#	Stop OG	
906	7/16" x 1-3/8" - RL	Solid Pine



M&M#	Colonial Door Stop	
943LO	3/8" x 2-1/8" - RL	Oak
943L	7/16" x 2-1/8" - RL	Solid Pine

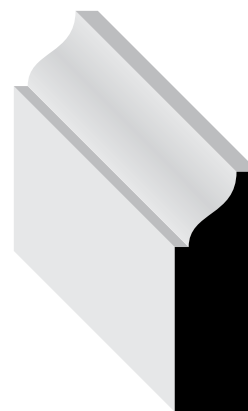

M&M#	Colonial Door Stop	
945	7/16" x 1-5/8" - RL	Solid Pine
945O	3/8" x 1-5/8" - RL	Oak
946	7/16" x 1-3/8" - 7' & RL	Solid Pine
937MF07	7/16" x 1-1/4" - RL	Ultralite
937PRI	7/16" x 1-1/4" - 16'	FJ Pop Primed
937	7/16" x 1-1/4" - RL	Solid Pine
937LALP	1/2" x 1-1/4" - RL	Knotty Alder
936JF07	3/8" x 1-3/8" - 7'	Jesso