

Panel Moulds

Panel Moulds are used to frame wall paneling and add an accent to your walls. Often used in furniture construction.


ALL SIZES NOMINAL

M&M#	Panel Mould
9514PRI	11/16" x 1-5/8" - 16' FJ Pop Primed

M&M#	Panel Mould
134LPOP	5/8" x 1-1/4" - RL Poplar

M&M#	Panel Mould
182	11/16" x 1-5/8" - RL Solid Pine

M&M#	Panel Mould
140POP	7/16" x 1-1/4" - RL Poplar

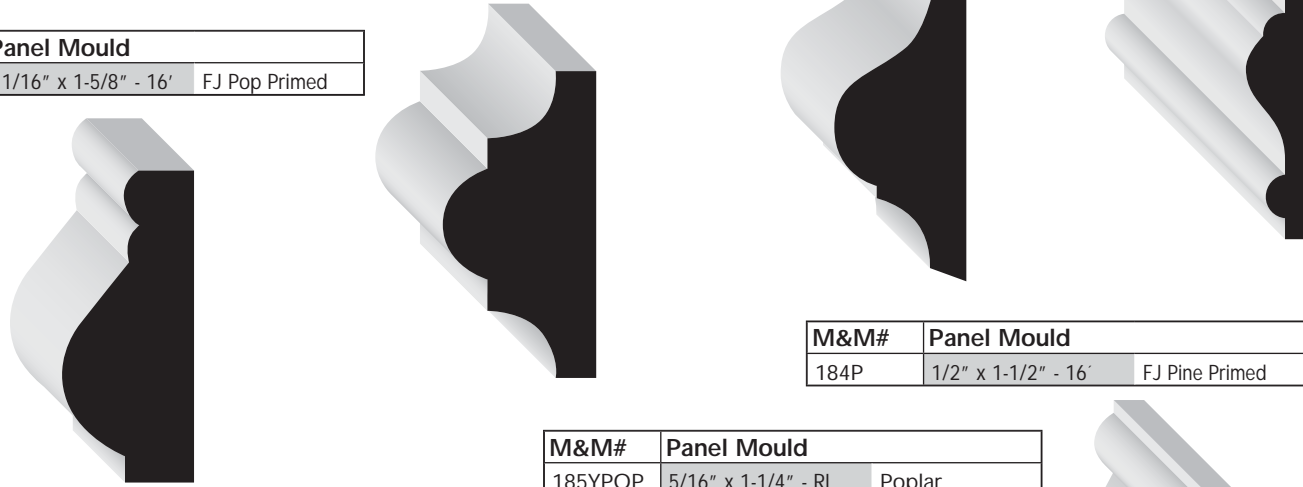


M&M#	Panel Mould
184P	1/2" x 1-1/2" - 16' FJ Pine Primed


M&M#	Panel Mould
185YPOP	5/16" x 1-1/4" - RL Poplar

M&M#	Panel Mould
9512PRI	5/8" x 1-1/2" - 16' FJ Pop Primed

M&M#	Panel Mould
185KO	7/16" x 1-3/8" - RL Oak
185	9/16" x 1-1/2" - RL Solid Pine

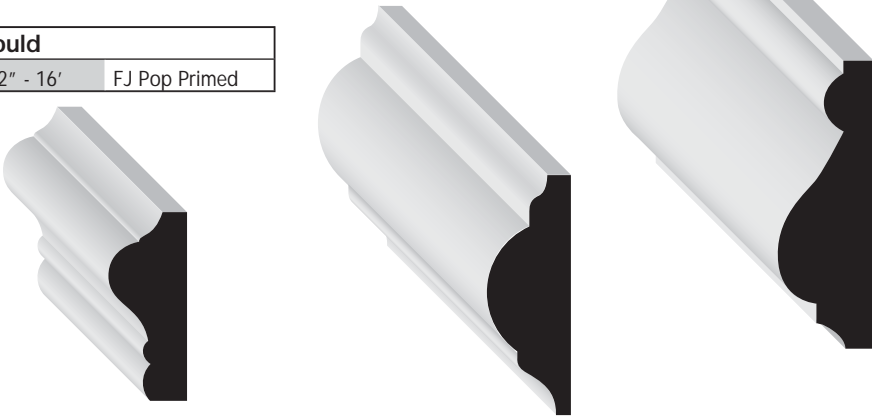

M&M#	Panel Mould
989	3/8" x 1-1/8" - RL Solid Pine

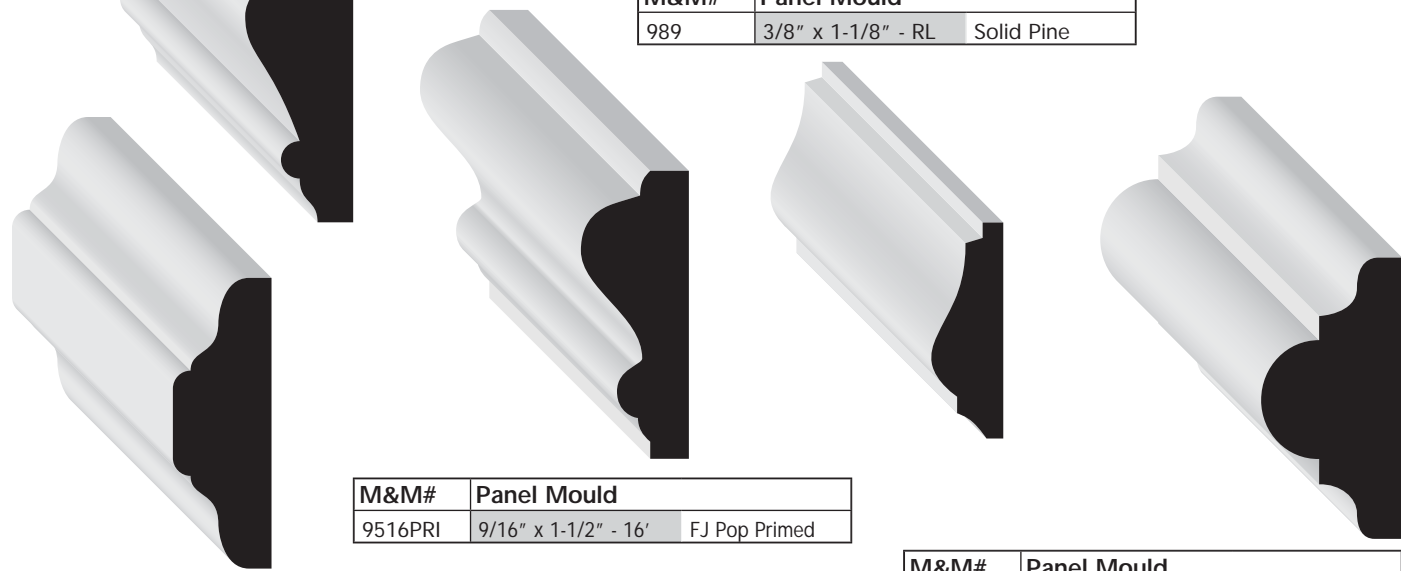

M&M#	Panel Mould
9516PRI	9/16" x 1-1/2" - 16' FJ Pop Primed

M&M#	Panel Mould
1648POP	1/2" x 1-1/2" - RL Poplar

M&M#	Panel Mould
2448BMPOP	3/4" x 1-1/2" - RL Poplar
2448BMFJP	3/4" x 1-1/2" - 16' FJ Raw Poplar

Panel Moulds

Panel Moulds are used to frame wall paneling and add an accent to your walls. Often used in furniture construction.


ALL SIZES NOMINAL

M&M#	Panel Mould
427	9/16" x 1-1/8" - RL Solid Pine

M&M#	Panel Mould
427	9/16" x 1-1/8" - RL Solid Pine

M&M#	Panel Mould
462	1/2" x 1" - RL Solid Pine

M&M#	Panel Mould
462	1/2" x 1" - RL Solid Pine

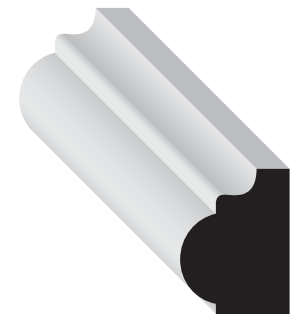

M&M#	Panel Mould
348OF08	3/4" x 9/16" - 8' Oak
348POPFO8	3/4" x 9/16" - 8' Poplar
1148POPFO8	11/16" x 1-1/4" - 8' Poplar

M&M#	Panel Mould
1846POP	9/16" x 1-7/16" - RL Poplar


M&M#	Panel Mould
1846POP	9/16" x 1-7/16" - RL Poplar

M&M#	Shingle/Panel Mould
309PTPOP	5/8" x 1-1/2" - RL Poplar


M&M#	Bar Rail
4096O	1-1/4" x 3" - RL Oak
56144O	1-3/4" x 4-1/2" - RL Oak

Panel Moulds


Panel Moulds are used to frame wall paneling and add an accent to your walls. Often used in furniture construction.
ALL SIZES NOMINAL

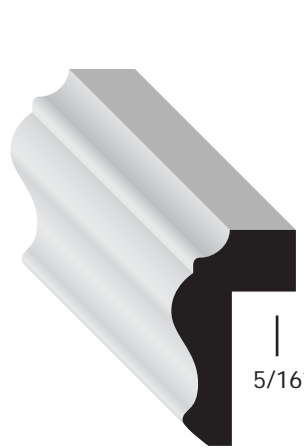


M&M#	Ply Cap
292L	5/8" x 1-1/8" - RL + 8' Solid Pine

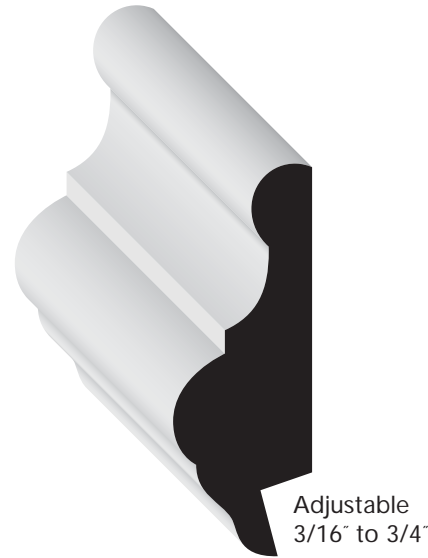

M&M#	Ply Cap
2464PMO	3/4" x 2" - RL Oak
2464PMPOP	3/4" x 2" - RL Poplar

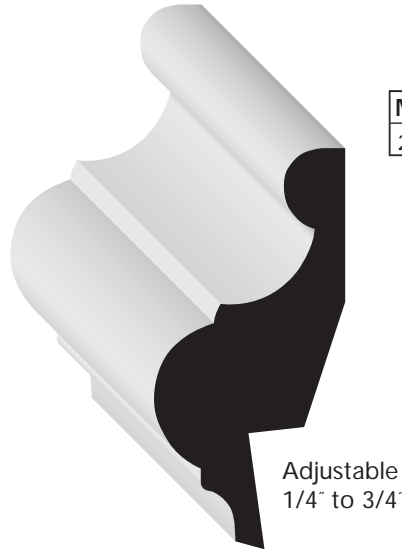

M&M#	Panel Mould
6PM	11/16" x 2" - RL Solid Pine
6PMPOP	13/16" x 2-1/8" - RL Poplar

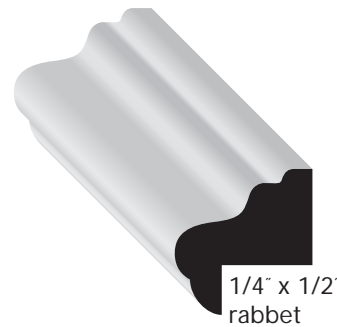

M&M#	Ply Cap
2424RPOP	3/4" x 3/4" - RL Poplar



M&M#	Ply Cap
2664-PRPOP	13/16" x 2" - RL Poplar



M&M#	Panel Mould
7PMPOP	3/4" x 2-3/4" - RL Poplar



M&M#	Ply Cap
3264-PRPOP	1" x 2" - RL Poplar

Door Stops

The Door Stop mouldings are attached to the door jamb on both sides and at the top. It is where the door comes to a rest when it is closed stopping the door from moving any further, and covering the gap that would otherwise appear between the door and the jambs.
ALL SIZES NOMINAL



M&M#	R1E Door Stop
876	7/16" x 1-3/8" - RL Solid Pine
885	3/8" x 1-5/8" - RL Solid Pine




M&M#	Door Stop
974	3/8" x 1-3/8" - RL Solid Pine



M&M#	R.E. Double Bullnose Stop
877LM190	1/2" x 1-1/4" - 7'6" Ultralite E2E
877LPRI98	1/2" x 1-1/4" - 8'2" FJ Pop Primed E2E

M&M#	R.E. Double Bullnose Stop
887LP	3/8" x 1-1/4" - 7' - 16' FJ Pine Primed E1E
887LMAP	3/8" x 1-1/4" - 7' - 16' Maple
887LPOP	3/8" x 1-1/4" - 7' - 16' Poplar
887LPRI	3/8" x 1-1/4" - 7' - 16' FJ Pop Primed
887LO	3/8" x 1-3/16" - RL & 7' Oak
887	5/16" x 1-1/4" - RL & 7' Pine E2E
887CEF07	5/16" x 1-1/4" - 7' P/E Chesapeake

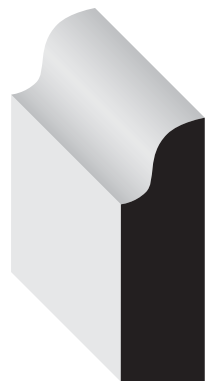

M&M#	Stop OG
906	7/16" x 1-3/8" - RL Solid Pine
905L	7/16" x 1-5/8" - RL Solid Pine
905LP	7/16" x 1-5/8" - 16' FJ Pine Primed



M&M#	Stop
890POP	11/32" x 7/8" - RL Poplar

M&M#	Ranch Door Stop
846	7/16" x 1-3/8" - 7' & RL Solid Pine
846MAP	7/16" x 1-3/8" - 7' & RL Maple
846O	7/16" x 1-3/8" - 7' & RL Oak
846POP	7/16" x 1-3/8" - 7' & RL Poplar
855	7/16" x 1-5/8" - RL Solid Pine



M&M#	Bi-Fold Stop
313MAPF07	11/16" x 1-5/8" - 7' Maple
313OF07	11/16" x 1-5/8" - 7' Oak



M&M#	Bi-Fold Stop
313F07	11/16" x 1-3/8" - 7' Solid Pine
313BFPOP07	11/16" x 1-3/8" - 7' Poplar

